 
 
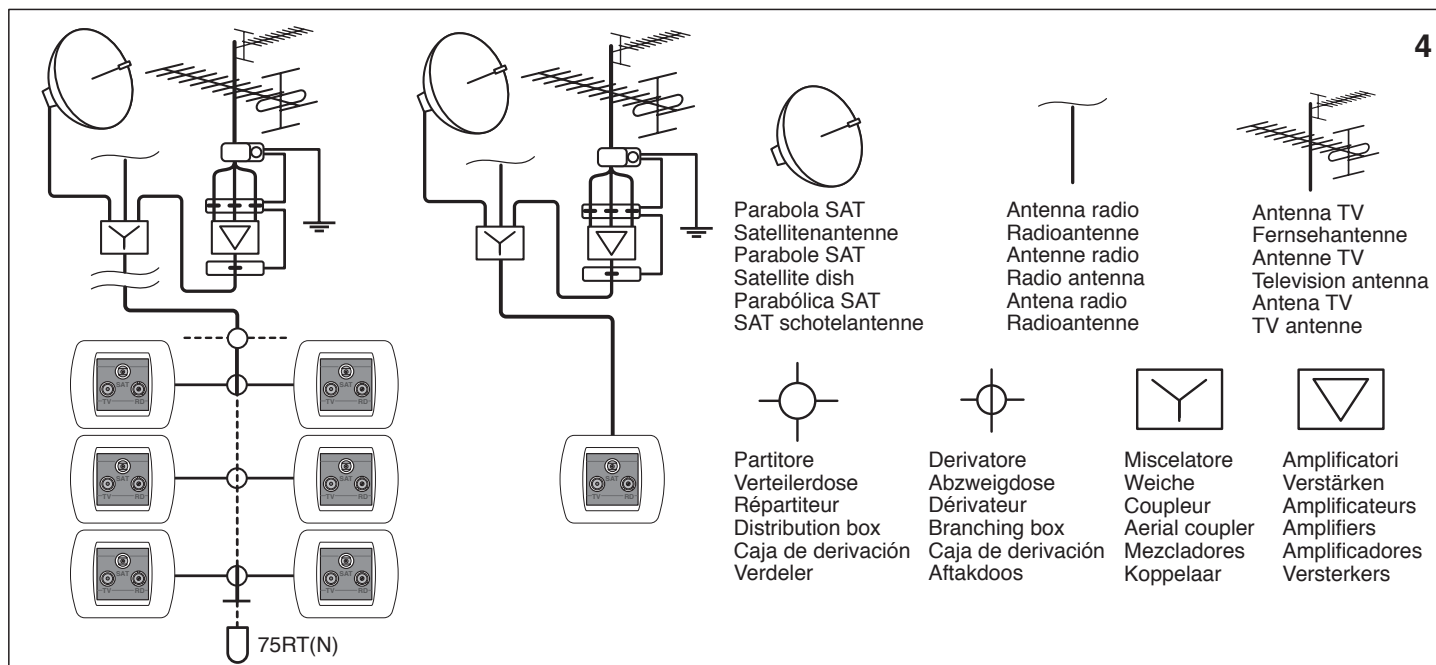 
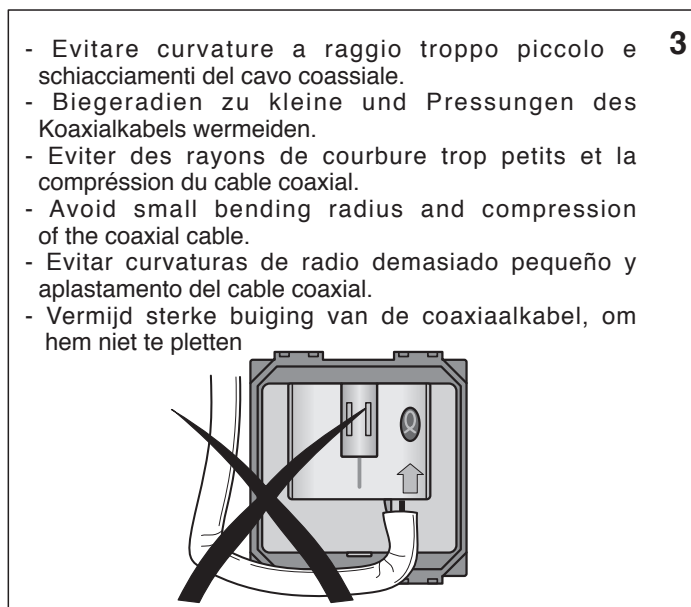 
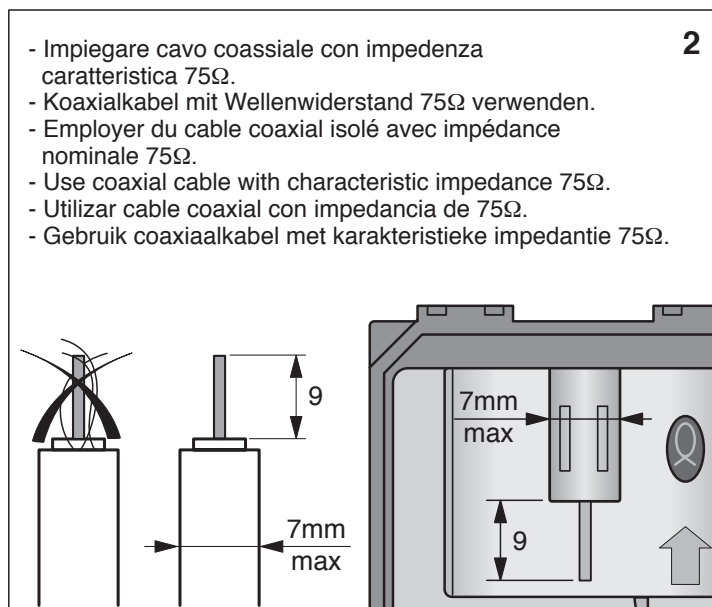 
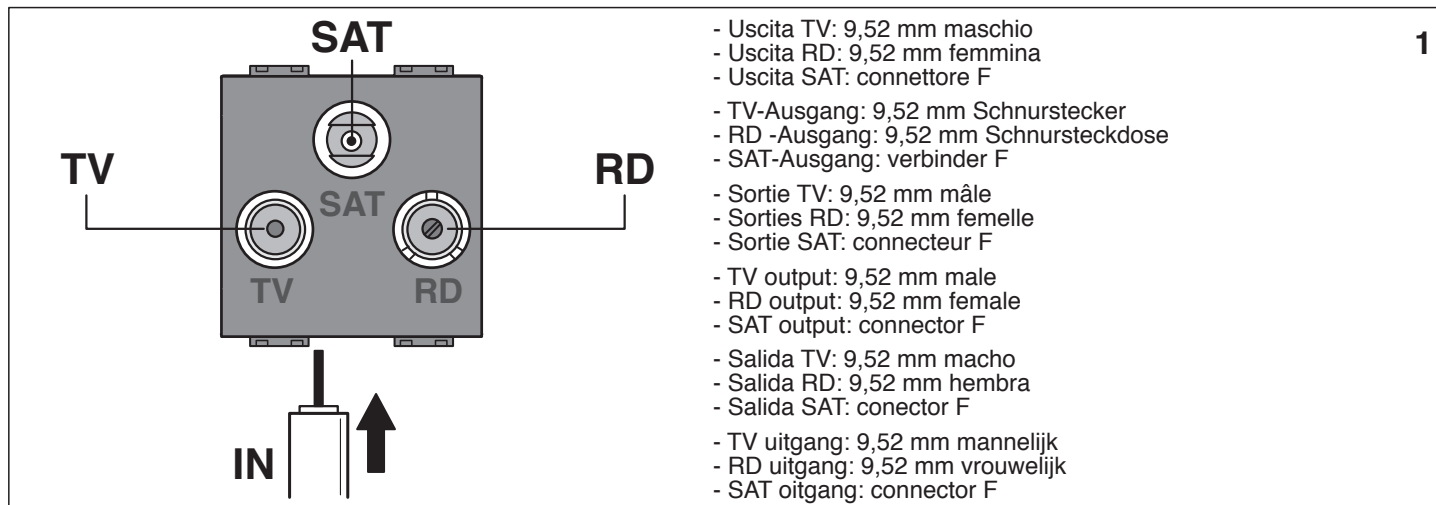 


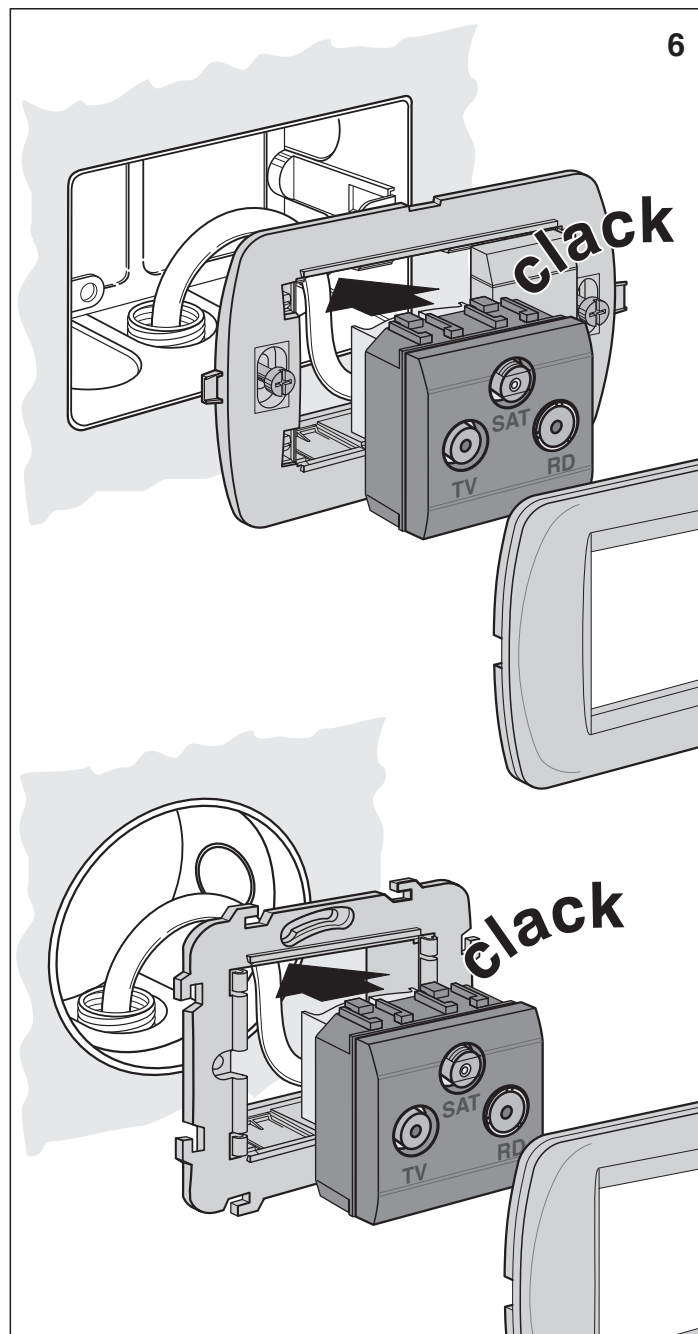 


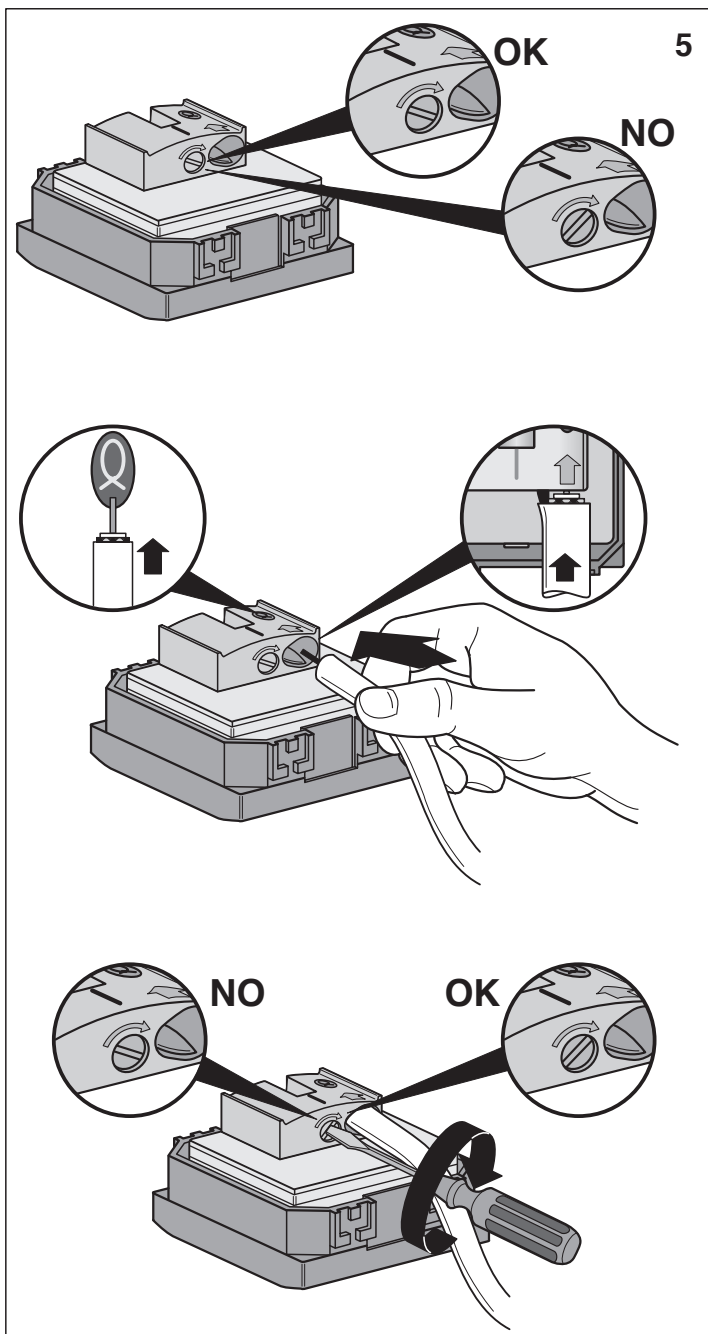

Nota: per un utilizzo ottimale della presa, tutte le uscite devono essere utilizzate.

Bemerkung: um die Steckdose optimal zu verwenden, müssen alle Ausgänge verwendet werden.

Note: pour un emploi optimal de la prise, toutes les sorties doivent être utilisées.

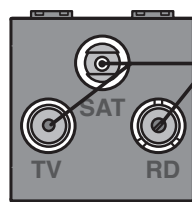

Ad

Note: for the optimum use of the jack, all outputs should be used.

Nota: para un uso optimal de la toma, es necesario utilizar todas las salidas.

Noot: voor een optimaal gebruik van de aansluiting moeten alle uitgangen worden benut.

	Zo	Ad				B1	FM	VHF	UHF	SAT IF
			OUT		22	47-68	87,5-108	120-470	470-862	950-2400
	Ω	dB		mA	KHz	MHz	MHz	MHz	MHz	MHz
HC/HS4210D L/N/NT4210D A5173SAT AM5173SAT 21277 - 23277 - 25877 23477 - 23677	75	< 1,5	TV							
		< 1,5	RD							
		< 1,5	SAT	500						

Ad = Attenuazione diretta o di derivazione - Anschlußdämpfung
Atténuation de dérivation - Side loss
Atenuación directa o de derivación - Aftakdemping

Zo = Impedenza caratteristica - Wellenwiderstand
Impedance nominale - Nominal impedance
Impedancia - Nominal impedantie