# **TRIDONIC**

RoHS

# **SMART Plug Gr**

Grouping plug

## **Product description**


- Accessories for PCA EXCEL of xtec II generation ballasts
- Enables simple DALI group addressing
- Quick and simple installation possible (check installation instructions)
- No additional software required

#### Technical data

Power supply via	SMART interface	
Current draw	< 1 mA from SMART interface	
Operating temperature	-25 +70 °C	
Storage temperature	-25 +85 °C	
Type of protection	IP20	
Max. casing temperature to	85 °C	



Standards, page 2

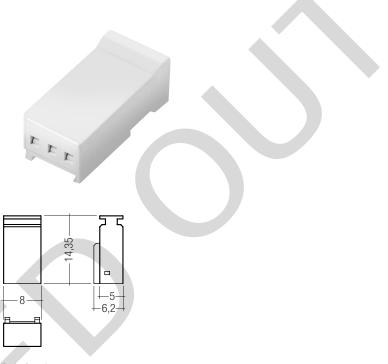

# Ordering data

Ordorning data		
Туре	Article number	Packaging bag
SMART Plug Gr A	86459317	10 pieces
SMART Plug Gr B	86459318	10 pieces
SMART Plug Gr C	86459319	10 pieces
SMART Plug Gr D	86459320	10 pieces

# Specific technical data

Туре	Labelling	DALI group
SMART Plug Gr A	Gr A	1
SMART Plug Gr B	Gr B	2
SMART Plug Gr C	Gr C	3
SMART Plug Gr D	Gr D	4



## SMART Plug Gr

In combination with the PCA EXCEL one4all ballasts, based on the xtec II platform, SMART Plug Gr provides a easy grouping without software tool. With a SMART Plug Gr installed, the PCA EXCEL one4all based on the xtec II platform, can be switched on and off via DSI or DALI signals (PCA EXCEL one4all), switchDIM or the mains.

#### Standards

EN 61547 EN 61347-1 EN 61347-2-11 EN 55015

#### Set-up

- To ensure that the plug is recognised by the ballast it must be connected to the SMART interface before input voltage is applied
- For faultless operation the SMART Plug is inserted into the ballast once and then should remain in the device until the replacement of the unit
- The smart plug is mechanical not designed for frequently plugging
- Only for the use of ballasts with xitec II label
- Typical writing cycles 1,000,000 and a failure rate of max. 0.2 %

## Wiring advices

- The SMART plugs have to be connected only to the SMART interface of PCA EXCEL one4all, based on the the xtec II range
- The SMART interface is not SELV
  The installation instructions for mains voltage therefore apply
- Before connecting / disconnecting the plug to / from the SMART interface the power supply has to be switched off

## SMART Plug installation into PCA:



The default insertion direction is marked with the one-side notch.

