






## Manual & Installation Guidelines

### Electrical connections

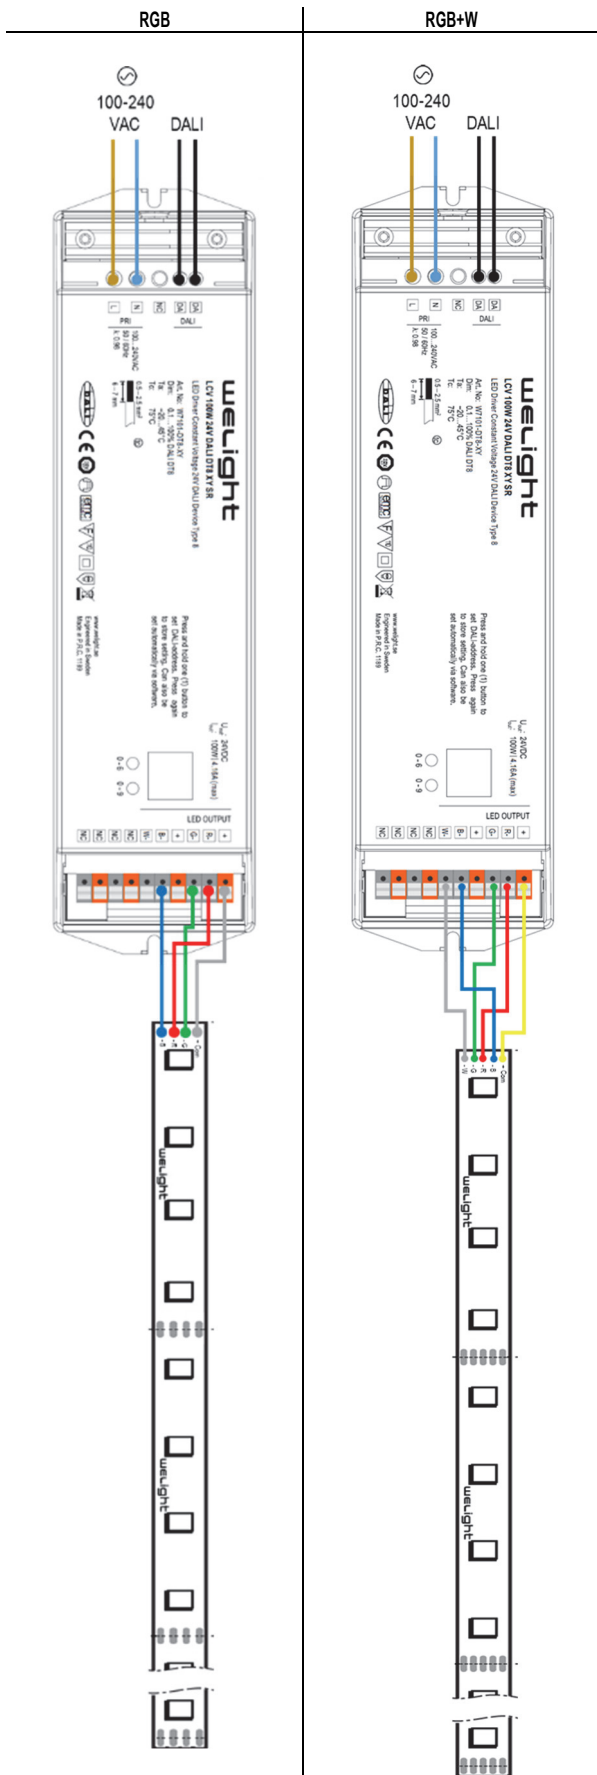

Terminal	Connection	Details
N L	Mains supply	100-240 VAC
DA	DALI signal	0±4.5 V for "0" and 16±6.5 V for "1"
+	LED Output	24 VDC Common +
R-	LED Output	24 VDC Red LED -
G-	LED Output	24 VDC Green LED -
B-	LED Output	24 VDC Blue LED -
W-	LED Output	24 VDC White LED -
NC	Not in use	

### Setting the DALI-address

If you want to set the DALI-address via software, please refer to your DALI-software manual to set the DALI-address of the driver.

If you want to set the DALI-address manually, please follow the instructions below. The address can be set to any number between 01-64.



1. Make sure the driver is connected to mains supply. Press and hold the left button below until the display starts flashing then release the button.
2. Click on the left button to set the first digit (ten position) in the DALI-address, i.e. any number from 0-6.  
Example; to set the DALI-address 25, click the left button until the digit 2 is shown in the display.
3. Click on the right button to set the second position in the DALI-address, i.e. any number from 0-9.  
Example; to set the DALI-address 25, click the right button until the digit 5 is shown in the display.
4. Press and hold down any button until the display stops flashing to store the setting into the driver.



Always disconnect mains before connecting the LED to the driver